

Hornady®
Accurate. Deadly. Dependable.

OWNER'S MANUAL

MEDIA SIFTER



Item No. 050207

Instructional videos for Hornady® reloading products are available at hornady.com.

INTRODUCTION

The Hornady Media Sifter has been designed to quickly and easily separate tumbling media from cartridge cases. Features include a clear lid to monitor tumbling action and a locking handle to support the base when loading. Plus, the interlocking sifter drum can be conveniently loaded and unloaded. Follow these instructions for safe and maintenance-free operation.

GENERAL

- Read manual and become comfortable with the operation before using the Media Sifter.
- Use Media Sifter on a flat, dry surface.
- Do not use chemicals other than those recommended in the Hornady Rotary Tumbler and Hornady M1 Case Tumbler user manuals.
- Do not use with loaded ammo.
- Do not expose Media Sifter to prolonged periods of direct sunlight.

OPERATING INSTRUCTIONS

After unpacking the Media Sifter, set the unit on a solid, flat surface. Become familiar with how the unit assembles and operates before adding media and cartridge cases.

The Media Sifter consists of a base, clear lid, and two sifter drum halves.

To begin separating cartridge cases from media, place the sifter drum with the attached handle into the base. Rotate the handle down to lock the pin into the base and prevent the sifter drum from rotating. If cartridge cases were tumbled with dry media (i.e. corn cob or walnut), pour the contents of the tumbler into the sifter drum. If cartridge cases were



tumbled in wet media (i.e. stainless-steel pins), pour most of the water out of the tumbler before pouring the contents into the media sifter drum.

Place the top half of the sifter drum over the lower half by aligning the tabs and slots on each half. Place the lid over the base to hold the two halves together. Place one hand on the lid, and unlock the sifter drum by rotating the handle up with the other hand. While holding the lid in place, begin rotating the sifter drum by turning the handle. It may take numerous rotations to completely clear the media from the cartridge cases.

When finished, rotate the handle to the bottom and lock the handle into the base. Remove the lid and top half of the sifter drum. The bottom half of the sifter can now be easily removed.


NOTE: If using the Hornady Case Cleaning Solution, it is good practice to rinse the cases with water to remove all residue. The cleaning solution will not damage the cases, but cases may discolor over time if stored with residue on them.

Wet cases should be placed in the Hornady Case Dryer (sold separately as Item No. 053310) or laid out over a towel to dry.


If using water and stainless-steel pins, the pins can be separated from the water using the included mesh screen.

Option 1: Place the mesh screen over a small bucket or container (not included). Pour the water and pin solution into the mesh screen. If the screen is above the water, the pins can be left in the screen to dry. If the pins are submerged, remove the water so pins can dry.

 
Option 2: Transfer the water and pin solution from the base of the Media Sifter into a bucket or container (not included). Place the mesh screen over the bottom half of the sifter drum and place it into the base. Pour the wet pins into the mesh screen and allow the pins to dry.

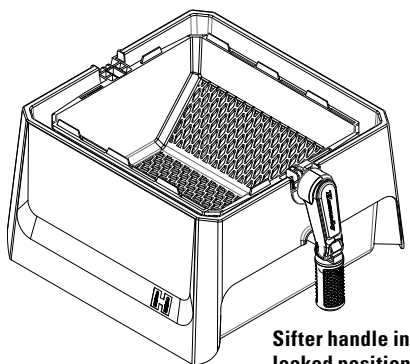

Sifter handle in locked position

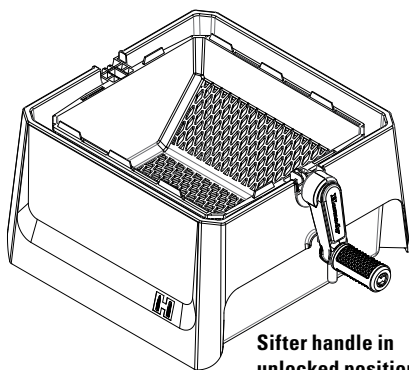 

Sifter handle in unlocked position

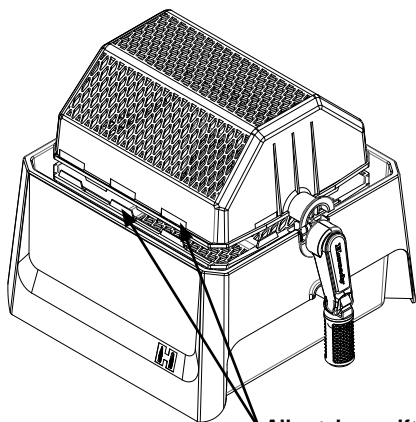 

Align tabs on sifter drum to assemble

Care and Maintenance

After use, the tumbler drum should be properly cleaned and dried before storing in a cool, dry location.

The stainless-steel tumbling pins should be properly dried and stored in a cool, dry location.

WARRANTY

All Hornady® reloading tools and accessories are warranted against material defects and workmanship.

Hornady® electronic components are covered by a one-year warranty from the date of purchase.

This warranty is void if the product (1) has been damaged by accident or unreasonable use, neglect, improper service or other causes not arising out of defects in material or workmanship; or (2) has been altered or repairs have been made or attempted by other than authorized factory personnel; (3) is used commercially; or (4) has been altered or defaced in any way.

This warranty supersedes all other warranties for Hornady® products either written or oral. No other warranty is expressed or implied.

PRODUCT REGISTRATION AND SERVICE

You must register your product to obtain Warranty Service. Complete the registration form at hornady.com/warranties.

TO RECEIVE WARRANTY SERVICE

To report a warranty claim, call Hornady® at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady®.

POST-WARRANTY SERVICE INFORMATION

For issues concerning service after the Limited Warranty expires, contact Hornady® at 800-338-3220.

 
PRODUCT SERIAL NUMBER AND REFERENCE INFORMATION

You must register your product in order to obtain warranty service. In the event you should need service for your product, please note the following information:

Serial Number _____

Date Purchased _____

Retailer _____

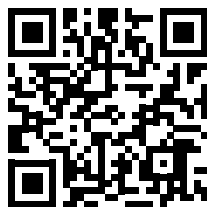

*Scan to register your
product to receive the full
benefit of its warranty.*

Hornady Manufacturing Company
P.O. Box 1848, Grand Island, NE 68802-1848
hornady.com/contact