

## Owner's Manual



# ONE-GUN BIOMETRIC VAULT



Item No. 95533



## POWER


1. Open the safe with either the mechanical override key or a previously programmed code.
2. Locate the battery compartment door on the top interior panel.
3. Swing the battery compartment door open by pressing the tab on the door.
4. Gently remove the 4-pack battery carrier from the door and insert 4 high quality AAA batteries.
5. Place the battery carrier back into the door and close.

**Note:** Replace all batteries at the same time. Use high quality batteries for best performance.

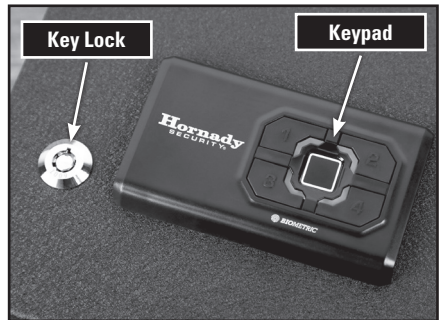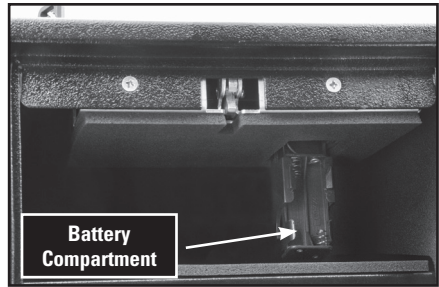

## PROGRAMMING/RESET COMBINATION CODE

1. Open the safe with either the mechanical override key or a previously programmed code.  
**NOTE:** The safe ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.
2. Locate the program button inside the safe, near the battery compartment. Press and release the program button. The green light will blink and beep twice.
3. Enter the new 4 to 6 digit code. Press and release the program button to enter the new code. The green light will blink and beep twice.  
(continue to Step 4)

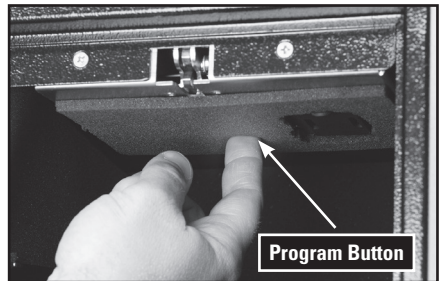

4. Re-enter the new 4 to 6 digit code. Press and release the program button to confirm the new code. The yellow light will blink and beep twice before returning to normal operation.
5. With the lid open, verify that the new code has been programmed and is functional by entering the new code. The safe motor should cycle after each correct entry.

**NOTE:** *Become comfortable with the operation of your safe before mounting your safe and storing anything of value inside.*

## PROGRAMMING FINGERPRINTS

1. Open the safe with the mechanical override key or a previously programmed code.

**NOTE:** *The safe ships with the default code of 1-2-3-4. To maintain the security of this product, a new code must be programmed before using.*



2. Press any keypad button to wake up the safe.
3. Locate the program button inside the safe near, the battery compartment. Press and release the program button. The green light will blink and beep twice.

4. Place a finger on the scanner. The green light will blink and beep once if a fingerprint is read. Place the same finger on the scanner two more times to complete the programming. The green light will blink and beep twice if the finger was successfully programmed.



5. With the lid open, verify the finger has been programmed and is functional by pressing any button on the keypad, and then placing the programmed finger onto the scanner. The safe motor should cycle after each correct fingerprint read.

## OPEN VAULT BY FINGERPRINT

Press any button on the keypad, and then place a previously programmed finger onto the scanner.

### **NOTE:**

- Pressing a button should illuminate the keypad green.
- When a correct finger is read, the keypad will turn yellow and the door should open.
- If an incorrect finger is read, the red light will blink and beep twice.
- After five incorrect entries, the red light will blink and beep during the 2 minute lockout. The safe can only be opened by the mechanical key during this time.

## ERASING ALL FINGERPRINTS:

1. Open the safe with the mechanical override key or a previously programmed code.
2. Locate the program button inside the safe, near the battery compartment. Press and hold the program button for approximately 3 seconds. Release the button when the green light turns red.
3. Press and release the program button again to confirm. The red light will turn into green light.
4. Verify previously programmed fingers will not open the safe.

**NOTE:** *Only programmed fingerprints can be erased. The combination code cannot be erased.*

## OPEN GUN VAULT BY COMBINATION CODE

Enter the previously programmed 4 to 6 digit code to open the safe.

### **NOTE:**

- Pressing a button should illuminate the keypad green.
- When a correct code is entered, the keypad will turn green and the door should open.
- If an incorrect code is entered, the red light will blink and beep twice.
- After five incorrect entries, the red light will blink and beep during the 2 minute lockout. The safe can only be opened by the mechanical key during this time.
- The first button pressed will both wake the safe up and register as the first entered number in the code.

## LOW BATTERY WARNING

To check the battery level, press any button to illuminate the keypad. If the battery level is lower than 25%, the keypad will illuminate yellow. The batteries should be replaced immediately to ensure proper function.

## KEYPAD TONES ON/OFF

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

**NOTE:** *Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.*



Item No.: 95533

Ext. Dimensions: 12.7" x 9.0" x 5.0"

Weight: 7.0 Lbs

Power: 4 AAA batteries (not included)

Instructional videos for Hornady Security®  
products are available at [hornady.com](http://hornady.com).



P.O. Box 1848, Grand Island, Nebraska 68802-1848  
308-382-1390 • 800-338-3220 • Fax: 308-382-5761  
[Hornady.com/contact](http://Hornady.com/contact)