

Owner's Manual

FIREPROOF KEYPAD SAFE

Item No. 95407

Hornady Security® electronic components are covered by a one-year warranty from the date of purchase. See Hornady.com for details.

Instructional videos for Hornady Security® products are available at hornady.com.



P.O. Box 1848, Grand Island, Nebraska 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761
Hornady.com/contact



Getting Started

1. Remove key override cover.
 2. Open the safe with the included mechanical override key.
 3. Remove the battery cover inside the safe.
 4. Insert 4 AA batteries and replace the battery cover.
5. Do not close the door before testing digital lock.

Note: Replace batteries periodically to optimize performance.

Note: Do not store the keys in safe.



Programming the Code

WARNING: The safe is pre-programmed with default code 1-2-3-4-ENTER. You must change this code before storing valuables to ensure the security of the product.

1. Open the safe with either the mechanical override key or default code.
2. Press and release the reset program button inside the door. The safe will beep twice and the keypad will blink green twice.
3. Enter the new code (4 to 6 digits) then press the ENTER button. The keypad should beep and blink green two times.
4. Re-enter the same new code then press the ENTER button. The keypad should beep and blink yellow two times.

Note: If a mismatched code is entered during programming, the keypad will blink red and beep three times. Return to step 2 to enter a new code.

5. With the safe open, enter the new code followed by ENTER to confirm the safe is working properly.

Note: Become comfortable with the operation of your safe before storing anything of value inside.

Open Safe By Combination Code

Enter the previously programmed 4 to 6 digit code to open the safe, followed by the ENTER button.

- Pressing a button should illuminate the keypad in green.
- When a correct code is entered, the keypad will beep and blink green two times, and the door should open.
- If an incorrect code is entered, the keypad will blink red and beep two times.
- After five incorrect entries, the safe will beep and lock out for 2 minutes. The safe can only be opened by the mechanical key during this time.

Mounting

If mounting to a concrete floor, follow the instructions below using the included concrete anchor bolts. If mounting to other surfaces, i.e., wood floor or framing, other hardware will be needed (not included). Two or more anchors should be placed into a solid surface to maximize security.

1. Place the safe in the desired location and locate the predrilled holes in the bottom of the safe.
2. Use the holes in the bottom of your safe to mark the anchor locations.
3. Use a hammer drill and a 3/8" concrete bit to drill each hole at least 3" deep into the concrete floor.
4. Insert the anchor bolts through the safe floor and into the drilled holes. A hammer may be needed to tap the anchor bolts into the holes.
5. Tighten the nuts using a socket until the anchors expand snugly into place.

Keypad Tones On/Off

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

Note: Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.

Item No.: 95407

Exterior Dimensions: 12.0" W x 15.0" D x 16.5" H

Interior Dimensions: 10.25" W x 12.5" D x 15.0" H

Weight: 62 Lbs

Power: 4 AA batteries (not included)