

SPECIFICATIONS

Item No.	Approx. Length	Power	Max. Effective Vol.
95884	18"	220V–240V 50kHz 18W	Up to 200 cubic feet

WARRANTY

Hornady Security® electronic components are covered by a one-year warranty from the date of purchase. See hornady.com for details.



Scan to register your product to receive the full benefit of its warranty.



P.O. Box 1848, Grand Island, Nebraska 68802-1848
HornadySecurity.com | hornady.com/contact

INSTRUCTIONS



DEHUMIDIFIER
RODS HD

18" – No. 95884



Instructional videos for Hornady Security® products are available at hornady.com.

FEATURES

The Hornady Security® Dehumidifier Rod HD is designed to elevate the air temperature inside your safe to drive the condensation point outside of the safe/enclosure, protecting the contents from excess humidity and preventing rust. The Dehumidifier Rods HD features a higher wattage heating element and heat dissipating ribs to more efficiently heat larger, high humidity enclosures.

The included 220V-240V power cord is designed to easily remove from the Dehumidifier Rod HD to ease installation.

PROPER CARE

CAUTION HOT: The surface of the Dehumidifier Rod HD may get hot. Avoid touching or direct contact with the Dehumidifier Rod HD. Prolonged direct contact with the dehumidifier rod may cause damage to sensitive gun components or objects.


1. Always secure Dehumidifier Rod HD to mounting surface using the integrated feet and hardware.
2. Keep product clean and dry. Do not submerge in water.
3. Do not place anything on or around the dehumidifier when plugged in. Proper air flow is needed around the Dehumidifier Rod HD for safety and to dissipate heat and moisture.
4. Do not use around flammable materials.
5. For indoor use only. Keep away from water.

MOUNTING DEHUMIDIFIER ROD HD

The Dehumidifier Rod HD can be used in horizontal or vertical positions. However, the optimal location is horizontal along the bottom back edge of the safe/enclosure.

1. Use the integrated mounting feet and hardware to properly secure dehumidifier rod to the enclosure wall or floor to ensure proper operation and to avoid direct contact to the heating rod.
2. Place Dehumidifier Rod HD on surface to be mounted. Confirm the heating surface (red portion of Dehumidifier Rod HD) does not come in contact with walls, floor, or any other objects.
3. Use a screw in each mounting foot to secure Dehumidifier Rod HD to surface. Confirm Dehumidifier Rod HD is secure and cannot fall off or move.
4. If needed, a 16mm diameter hole can be drilled into the safe or enclosure to accommodate the power cord. **CAUTION: Power cord must be protected from all sharp edges and pinch points.**
5. To begin heating, plug power cord into both the end of the Dehumidifier Rod HD and into a wall outlet. Periodically check to see if the dehumidifier is warm, but not excessively hot.

NOTE: Dehumidifier rod can be attached to Square-Lok® panels using Square-Lok® grommets (sold separately).

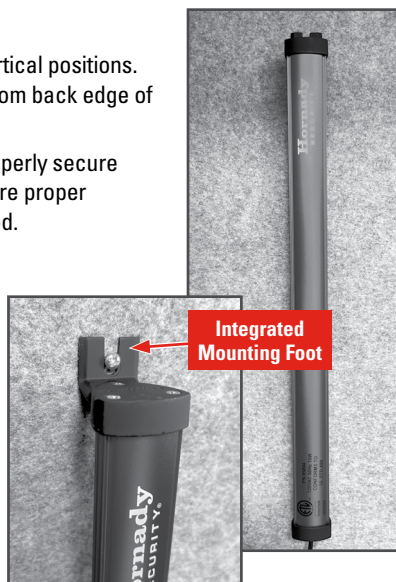

To secure Dehumidifier Rod HD to the Square-Lok® panel:

1. Install the Square-Lok® grommets (sold separately) to the Square-Lok® panel.
2. Use the integrated mounting feet and hardware to attach dehumidifier rod to the Square-Lok® grommets to ensure proper operation and to avoid direct contact with the heating rod.
3. Confirm power cord is not pinched before plugging in. Plugging in Dehumidifier Rod HD will turn it on and begin heating.
4. Periodically check to see if the dehumidifier is warm, but not excessively hot.



WARNING

Verify the cord cannot be damaged by sharp metal edges or pinch points along the length of the cord. Do not touch Dehumidifier Rod HD after plugging it in.

Dehumidifier Rod HD can be installed on wood or gypsum floors or walls with integrated mounting feet and included hardware. Make sure Dehumidifier Rod HD is properly secured to surface before plugging in.



Removeable power cord allows for easy installation.