

Keypad Safe Limited Warranty

Hornady Security® warrants the Keypad Safe will, in normal use and service, be free from defects in workmanship or materials for one (1) year from date of purchase.

This Limited Warranty does not cover any of the following:

- (a) Damage, deterioration, or malfunction resulting from accident, negligence, misuse, improper installation, or lack of maintenance;
- (b) Any defects not discovered and reported to Hornady Security® during the one (1) year warranty period;
- (c) Usual and customary deterioration or wear resulting from normal use.

This Limited Warranty is not transferable and is enforceable by the original owner only. In the event that Hornady Security® receives notice from the original purchase of a warranty claim in conformity herewith, Hornady Security® will promptly undertake an investigation of such claim. If the warranty claim is covered by the Limited Warranty, Hornady Security® will, in its sole discretion, repair the defect(s) or replace Keypad Safe at the expense of Hornady Security®.

Disclaimer of Implied Warranties. EXCEPT AS IS OTHERWISE EXPRESSLY SET FORTH IN THE ABOVE LIMITED WARRANTY, HORNADY SECURITY® MAKES NO OTHER REPRESENTATIONS OR WARRANTIES OF ANY KIND, WHETHER EXPRESSED OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE WITH RESPECT TO THE KEYPAD SAFE OR ANY COMPONENT PART THEREOF, INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY WITH RESPECT TO MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE OR USE.

Limitation on Liability. THE OBLIGATION OF HORNADY SECURITY® TO REPAIR OR REPLACE AS PROVIDED ABOVE SHALL BE THE SOLE AND ONLY REMEDY RESPECTING ANY DEFECT IN THE KEYPAD SAFE, OR ANY COMPONENT PART THEREOF. IN THE EVENT THAT THE FOREGOING REMEDY FAILS OF ITS ESSENTIAL PURPOSE, THE LIABILITY OF HORNADY SECURITY® TO PURCHASER SHALL NOT, IN ANY EVENT, EXCEED THE ACTUAL PURCHASE PRICE OF THE NON-CONFORMING GOODS; AND

Limitation on the Nature of Damages. HORNADY SECURITY® SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LIQUIDATED OR PUNITIVE DAMAGES OF ANY NAME, NATURE OR DESCRIPTION. HORNADY SECURITY® IS NOT RESPONSIBLE FOR DAMAGE TO OR THEFT OF THE KEYPAD SAFE, OR ITS CONTENTS.

Product Registration and Service

You must register your product to obtain Warranty Service. Complete the registration form at hornady.com/warranties.

To Receive Warranty Service

To report a warranty claim, call Hornady® at 800-338-3220 to request a return authorization number. Returns will not be accepted without prior return authorization by Hornady®.

Post-Warranty Service Information

For issues concerning service after the Limited Warranty expires, contact Hornady® at 800-338-3220.

Product Serial Number and Reference Information

You must register your product in order to obtain warranty service. In the event you should need service for your product, please note the following information:

Serial Number _____
(See the back or bottom of safe)

Key Number _____
(See the face of the lock)

Date Purchased _____ Retailer _____

Hornady Manufacturing Company
P.O. Box 1848, Grand Island, Nebraska 68802-1848
hornady.com/contact

Owner's Manual



COMPACT FIREPROOF KEYPAD SAFE

Item No. 95406



Scan to register your
product to receive the full
benefit of its warranty.



Instructional videos for Hornady Security®
products are available at hornady.com.


Getting Started

1. Remove key override cover.
2. Open the safe with the included mechanical override key.
3. Remove the battery cover inside the safe.
4. Insert 4 AA batteries and replace the battery cover.

Note: Replace batteries periodically to optimize performance.

5. Do not close the door before testing digital lock.

Note: Do not store the keys in safe.

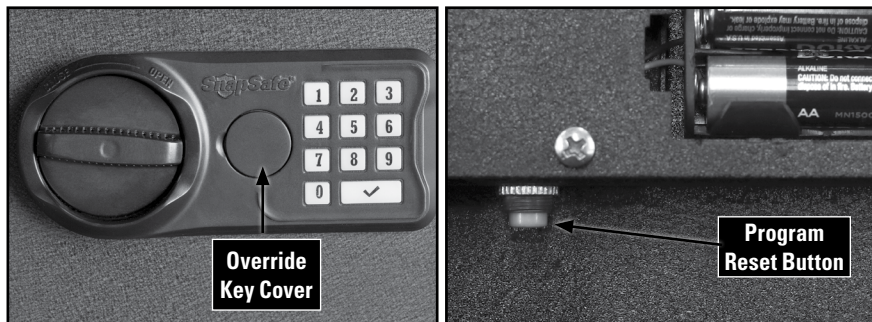

Programming the Code

WARNING: The safe is pre-programmed with default code 1-2-3-4-ENTER. You must change this code before storing valuables to ensure the security of the product.

1. Open the safe with either the mechanical override key or default code.
2. Press and hold the reset program button inside the door. The safe will beep twice and the keypad will blink green twice.
3. Enter the new code (4 to 6 digits) then press the ENTER button. The keypad should beep and blink green two times.

4. Re-enter the same new code then press the ENTER button. The keypad should beep and blink yellow two times.

Note: If a mismatched code is entered during programming, the keypad will blink red and beep three times. Return to step 2 to enter a new code.

5. With the safe open, enter the new code followed by ENTER to confirm the safe is working properly.

Note: Become comfortable with the operation of your safe before storing anything of value inside.

6. Open Safe By Combination Code
7. Enter the previously programmed 4 to 6 digit code to open the safe, followed by the ENTER button.
8. Pressing a button should illuminate the keypad in green.

9. When a correct code is entered, the keypad will beep and blink green two times, and the door should open.
 - If an incorrect code is entered, the keypad will blink red and beep two times.
 - After five incorrect entries, the safe will beep and lock out for 2 minutes. The safe can only be opened by the mechanical key during this time.

Mounting

If mounting to a concrete floor, follow the instructions below using the included concrete anchor bolts. If mounting to other surfaces, i.e., wood floor or framing, other hardware will be needed (not included). Two or more anchors should be placed into a solid surface to maximize security.

1. Place the safe in the desired location and locate the predrilled holes in the bottom of the safe.
2. Use the holes in the bottom of your safe to mark the anchor locations.
3. Use a hammer drill and a 3/8" concrete bit to drill each hole at least 3" deep into the concrete floor.
4. Insert the anchor bolts through the safe floor and into the drilled holes.
A hammer may be needed to tap the anchor bolts into the holes.
5. Tighten the nuts using a socket until the anchors expand snugly into place.

Keypad Tones On/Off

Press and hold the "1" button for three seconds to toggle sound ON and OFF.

Note: Toggling the sound off will turn the keypad, program, and alarm beeps off. Toggling the sound on will turn the keypad, program, and alarm beeps on.

Low Battery Warning

If the batteries level is lower than 50%, the keypad will remain yellow during operation. Replace batteries immediately to ensure proper operation of the safe.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compact Fireproof Safe – Item No. 95406

Exterior Dimensions:
15.0" W x 11.8" D x 11.8" H

Product Weight: 37 Lbs

Power: 4 AA batteries (not included)

Interior Dimensions:
13.6" W x 8.9" D x 10.2" H