


Hornady
Accurate. Deadly. Dependable.

Lock-N-Load® Spent Primer Catcher

(for use with the Lock-N-Load® AP™)

Item No. 050099

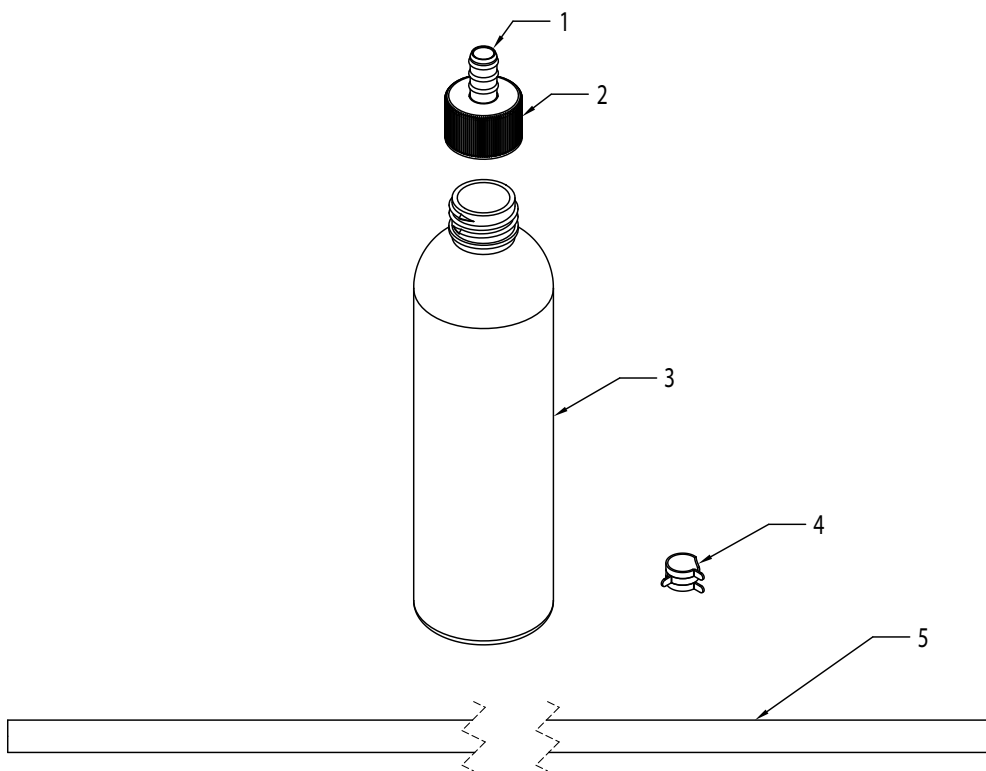

PARTS LIST


Item No.	Production Part Number	Description	Qty.
1	399850	SPENT PRIMER BOTTLE BARB	1
2	399851	SPENT PRIMER BOTTLE CAP	1
3	399852	SPENT PRIMER BOTTLE	1
4	399853	SPENT PRIMER HOSE CLAMP	1
5	392365	PVC TUBE	1

Setup/Assembly

1. With the cap removed from the bottle, push the barbed fitting (399850) through the bottle cap (399851).
2. Next, grab the flexible PVC spent primer tube (392365) and install on the barbed fitting.

Helpful Note: The PVC tube and barb have a tight fit. If you have trouble installing the tube on the barb, run hot tap water on both parts for roughly 30 seconds.

3. Cycle your AP press so the ram is in the uppermost position.
4. Install the cap on the bottle. If you wish to cut the hose to a shorter length, hold the end of the hose to the bottom of the AP press where it would be installed on the brass spent primer tube (290029), mark length and cleanly cut the PVC hose. (See figure A)
5. With a pliers, open up the hose clamp (399853) and install it on the PVC hose a few inches down from the top.
6. With the AP press ram in the uppermost position, install the PVC hose on the spent primer tube (290029) on the bottom of the press. With a pliers, open up the hose clamp and move it up on the hose that overlaps the AP brass spent primer tube. (See figure B)

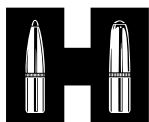

Hornady
Accurate. Deadly. Dependable.

P.O. Box 1848, Grand Island, Nebraska 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761
www.hornady.com • Hornady.com/contact_us