




Hornady
Accurate. Deadly. Dependable.

UNIVERSAL ACCESSORY BIN AND BRACKET

(for Lock-N-Load® APT™ or Lock-N-Load® Classic™)

Item No. 399692

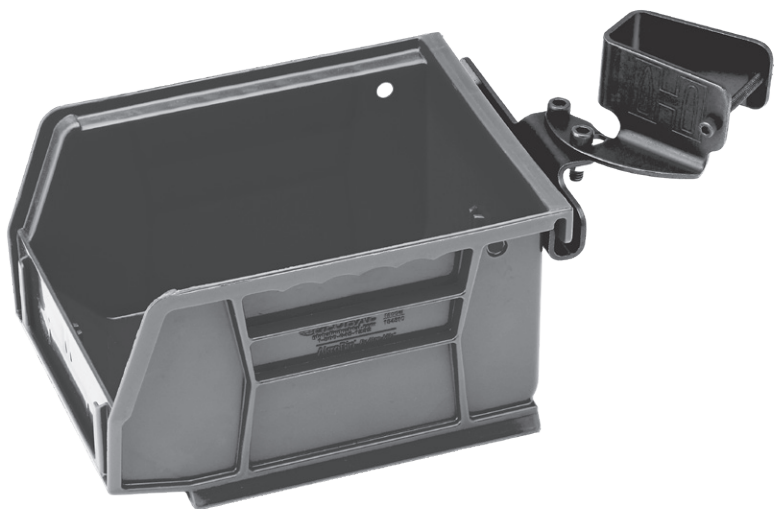

PARTS LIST

Item No.	Production Part Number	Qty.	Description
1	399920	1	FRONT BOX BRACKET TOP
2	399921	1	FRONT BOX BRACKET BOTTOM
3	480039	1	BOX CATCHER CAR LNL AP & PROJ
4	398698	2	8-32 NYLON LOCK NUT
5	399136	2	8-32 X .5 BHCS
6	399155	1	5-40 X 1.25 SHCS
7	399156	1	5-40 NYLON LOCK NUT

Setup/Assembly

Ensure that all components are present and in good condition.

To set up the Bin Bracket:

1. Attach the top half of the bracket to the bottom half by placing the 2 x 8-32x.5 BHCS through the top of the tab on the top half of the bracket and placing the 2 x 8-32 Nylon Lock nuts onto each of the BHCS. Do not tighten these all the way.
2. Slide the bracket onto the front of your Lock-N-Load® APT™ or Classic™ Press.
3. Place the 5-40x1.25 SHCS through the front of the top bracket, then place the 5-40 Nylon Lock nut onto the SHCS. Tighten using a 3/32" Allen Wrench (not included) until the bracket is secure.
4. Rotate the bottom half of the bracket until it is at the desired angle. Stabilize the 8-32 Nylon Lock Nuts using a wrench and use a 1/8" Allen Wrench to tighten both 8-32 x .5 BHCS.
5. Place bin on bracket.



Hornady
Accurate. Deadly. Dependable.

P.O. Box 1848, Grand Island, Nebraska 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761
www.hornady.com • Hornady.com/contact_us