


"FAST LOAD" POWDER MEASURE STAND


Mounting and Setup

- 1) Using two #14 screws or other suitable hardware, mount the stand at approximately a 30° angle to the front of your bench.

Note: *Mounting the Fast Load Stand at 30° to the bench front enables you to have the metering spool in either the front or back, and allows for more ergonomic use of the loading block.*

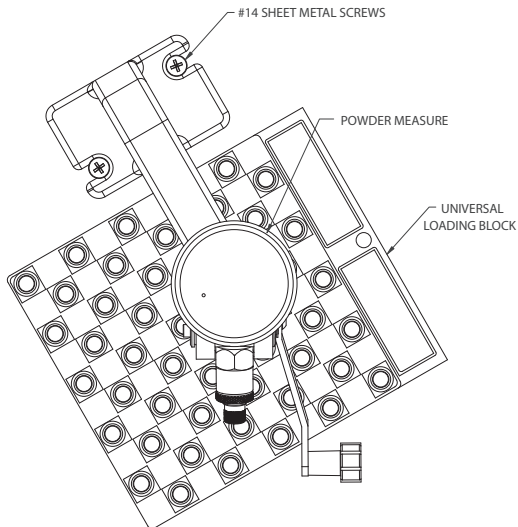

- 2) Thread the Sure-Loc™ lock ring and the Lock-N-Load® die bushing all the way on to the powder measure, and lock in place.
- 3) Insert the powder measure into the stand and rotate clockwise to lock into place.
- 4) Loosen the set screw on the Sure-Loc™ lock ring and rotate the powder measure to the desired position. Re-tighten the lock ring.
- 5) Rotate the powder measure counter-clockwise and lift to remove.

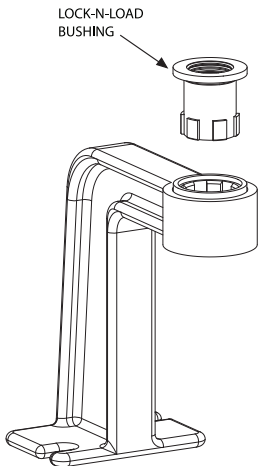

Hornady
Accurate. Deadly. Dependable.

P.O. Box 1848, Grand Island, NE 68802-1848
308-382-1390 • 800-338-3220 • Fax: 308-382-5761 • hornady.com/contact